

# HOW TO TRANSFER A FILE FROM THE DEVICE INTERN MEMORY ON THE USB KEY

We are going to see how to transfer a file from the intern memory of the device to an USB stick. We use two examples: one on which we get a configuration recorded in the device and a second on which we get a curve.

## I: Requisites

Must have configured the channel(s) you want to record.


For the channel configuration, refer to the note **NA\_ENR\_DAS50\_CONF\_VOIE**.

Must have set and made a record.


To set a record, refer to the note **NA\_ENR\_DAS50\_PARAM\_DECL**.

## II: Configuration transfer



- 1- Access to the "Setup" menu by pressing the corresponding button:

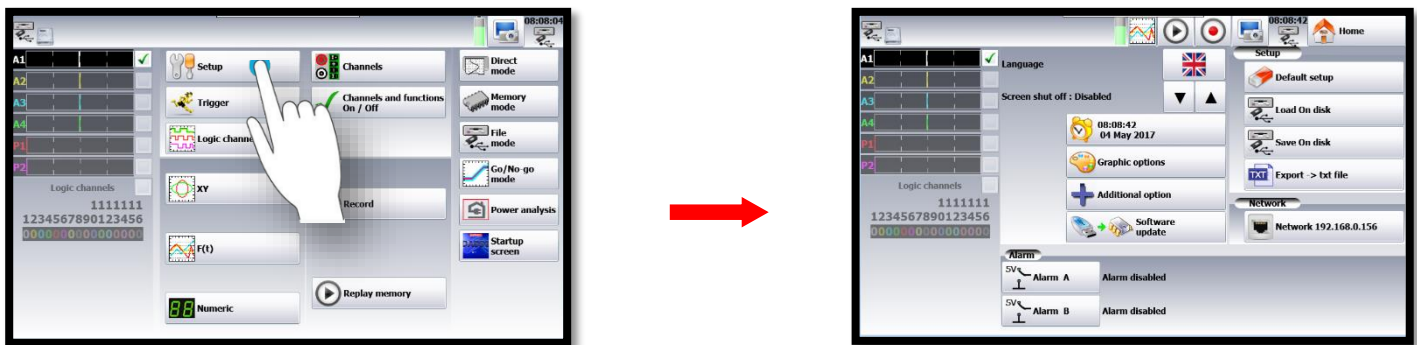



- 2- Access to the intern memory of the device by pressing button "Load on disk":

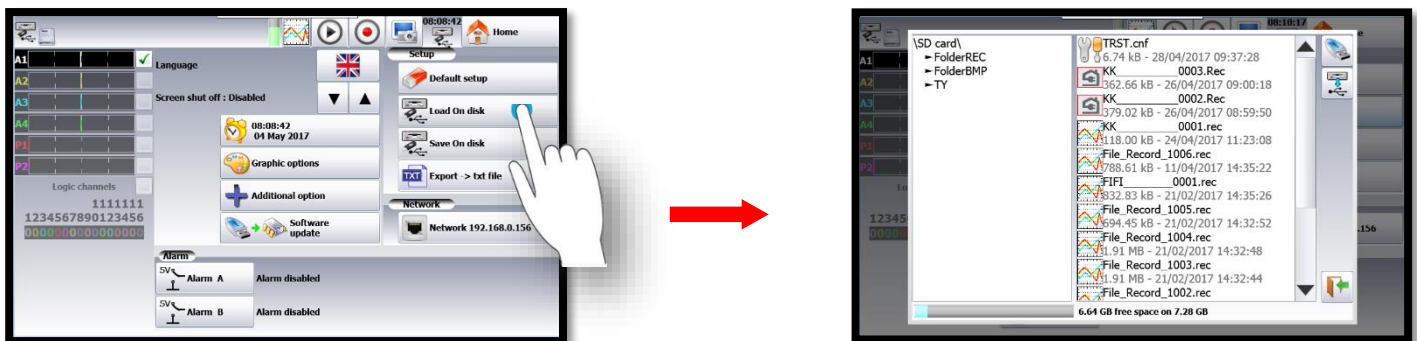



3- Choose the folder where your configuration has been recorded. In this case, we choose the "FolderBMP" folder:

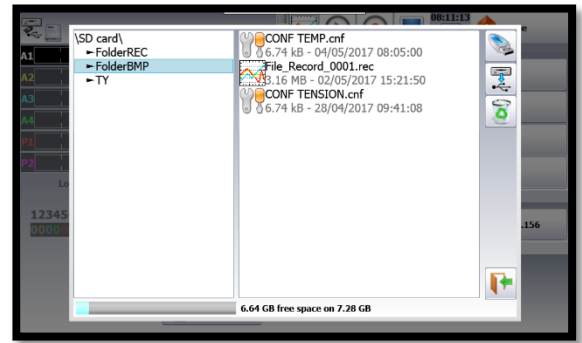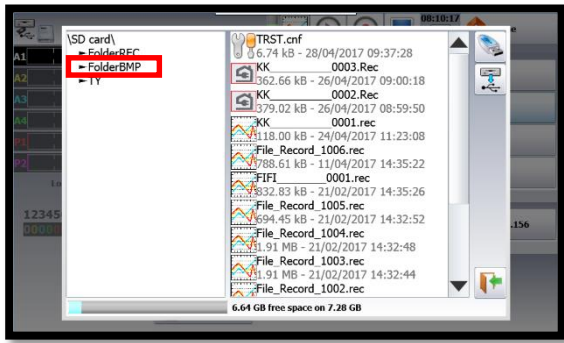

4- Choose the selected configuration:

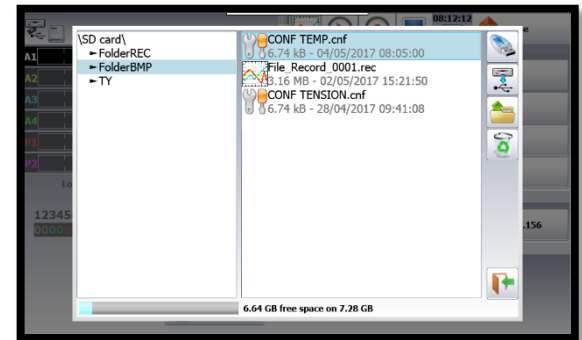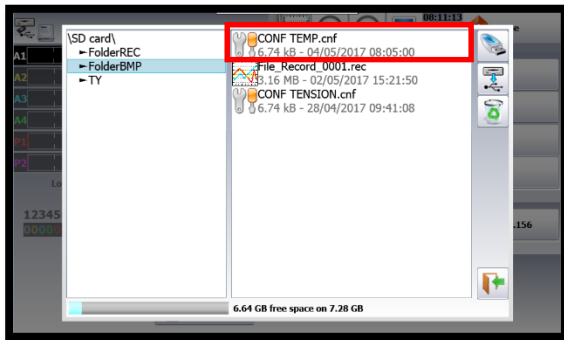

5- Copy the file on the USB stick by pressing on the corresponding button:

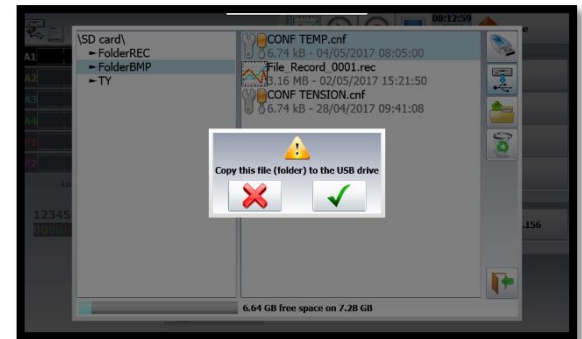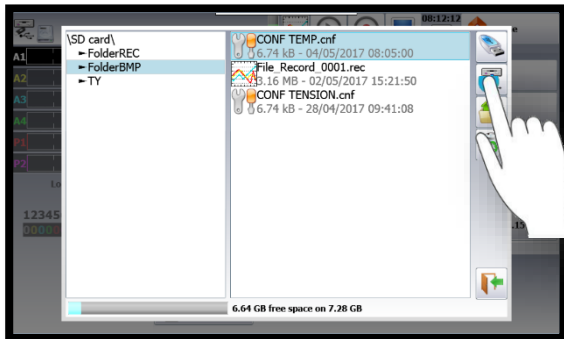


### III: The curve transfer



1- Access to the “Replay memory” menu by pressing on the corresponding button:





2- Access to the intern memory of the device by pressing button “Read a file”:

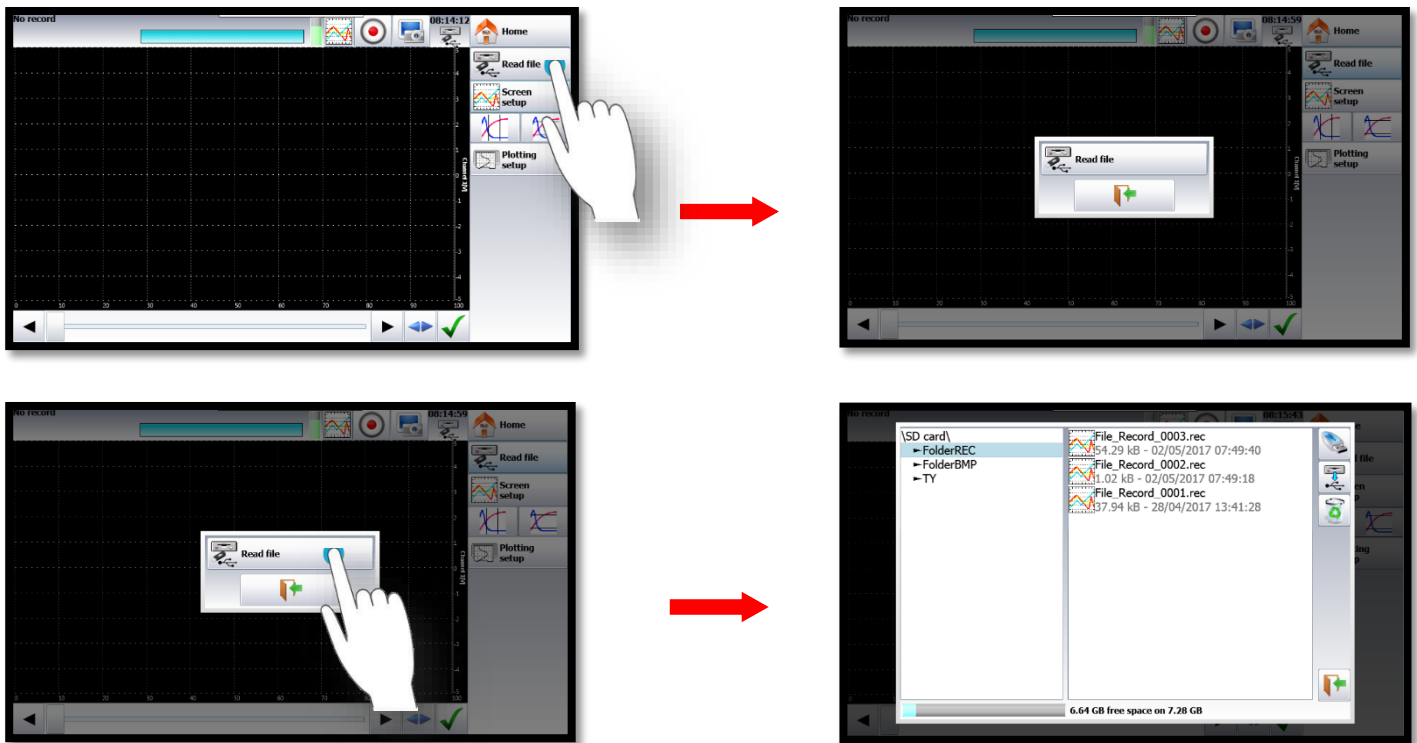

3- Choose the folder where your curve has been recorded. In this case we choose the folder "TY":

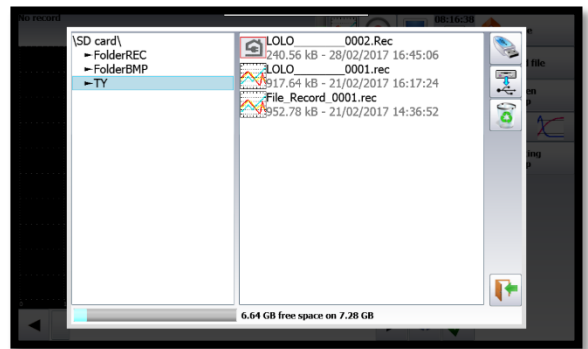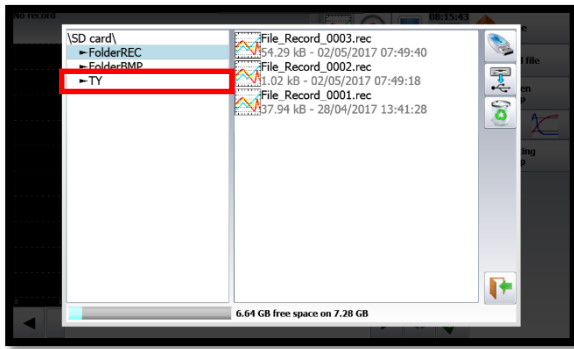

4- Choose the desired curve:

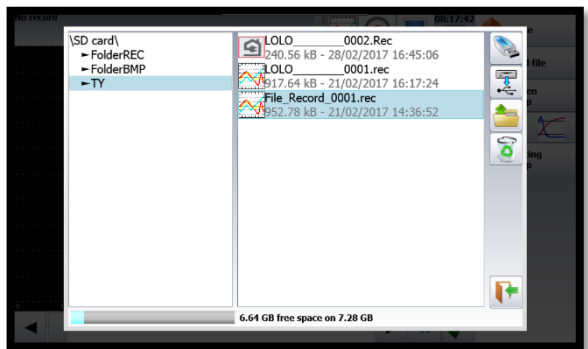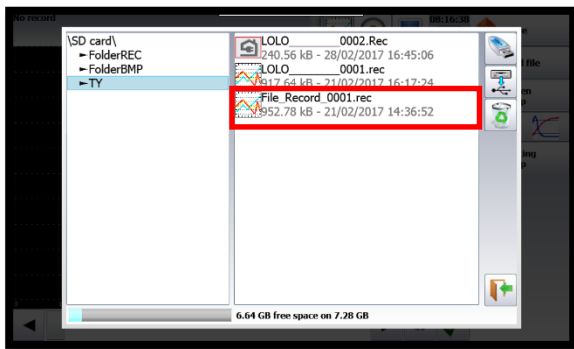

5- Copy the file on the USB key by pressing the corresponding button:

