

# Programming Manual

## 8550 Series

### Programmable DC Electronic Loads



# Contents

1	About Commands & Queries	6
1.1	How They are Listed	6
1.2	How They are Described	6
1.3	When can they be used?	6
1.4	Command Notation	6
1.5	Data Types	7
1.5.1	Character Data Types	7
1.5.2	<NR1> Value Data Type	7
1.5.3	<NR2> Value Data Type	8
1.5.4	<NRf> Value Data Type	8
1.5.5	<Boolean> Value Data Type	8
2	Common Command Introduction	9
2.1	*IDN?	10
2.2	*RST	10
2.3	*TRG	10
3	Input Subsystem	11
3.1	:INPut[:STATe]	11
3.2	:INPut:SHORT	11
4	MEASure Subsystem	12
4.1	MEASure:VOLTage	12
4.2	MEASure:CURRent	12
4.3	MEASure:RES	12
4.4	MEASure:POWer	13
5	Function Subsystem	14
5.1	:FUNction	14
6	Current Subsystem	15
6.1	:CURRent	15
6.2	:CURRent:RANGe	16
6.3	:CURRent:SLEW[:BOTH]	16
6.4	:CURRent:SLEW:RISE	17
6.5	:CURRent:SLEW:FALL	17
7	Voltage Subsystem	18
7.1	:VOLTage	18
7.2	:VOLTage:RANGe	19

7.3	:VOLTage:SLEW	19
7.4	:Voltage:ON	20
7.5	:Voltage:OFF	20
8	Resistance Subsystem	21
8.1	:RESistance	21
9	Power Subsystem	22
9.1	:POWer	22
10	Dynamic Subsystem	23
10.1	:DYNAmic:ALEVel	23
10.2	:DYNAmic:BLEVel	24
10.3	:DYNAmic:AWIDth	24
10.4	:DYNAmic:BWIDth	25
10.5	:DYNAmic:SLEW[:BOTH]	25
10.6	:DYNAmic:SLEW:RISE	26
10.7	:DYNAmic:SLEW:FALL	26
10.8	:DYNAmic:REPeat	27
10.9	:DYNAmic:MODE	27
11	List Subsystem	28
11.1	:LIST:FILE	28
11.2	:LIST:MODE	28
11.3	:LIST:COUNT	29
11.4	:LIST ADD	29
11.5	:LIST CLEAR	29
11.6	:LIST DONE	29
11.7	:LIST:LEVel:	30
12	LED Subsystem	31
12.1	:LED:VOLTage	31
12.2	:LED:CURREnt	31
12.3	:LED:RCOeff	32
13	Battery Subsystem	33
13.1	:BATtery:MODE	33
13.2	:BATtery:VALue	33
13.3	:BATtery:CONDition	34
13.4	:BATtery:LEVel	34
14	Time Subsystem	35
14.1	:TIMing:LOAD:MODE	35
14.2	:TIMing:LOAD:VALue	36
14.3	:TIMing:TStart:SOURce	36

14.4	:TIMing:TStart:LEVel	37
14.5	:TIMing:TStart:EDGe	37
14.6	:TIMing:TEND:SOURce	37
14.7	:TIMing:TEND:LEVel	38
14.8	:TIMing:TEND:EDGe	38
14.9	:TIMing:RESult	38
15	OCP Subsystem	39
15.1	:OCP:ISart	39
15.2	:OCP:IEND	40
15.3	:OCP:STEP	40
15.4	:OCP:DWELL	40
15.5	:OCP:VTRig	41
15.6	:OCP:RESult[:OCP]	41
15.7	:OCP:RESult:PMAX	41
16	OVP Subsystem	42
16.1	:OVP:VTRig	42
16.2	:OVP:RESult[:OVP]	42
16.3	:OVP:RESult:TIME	42
17	OPP Subsystem	43
17.1	:OPP:PStart	43
17.2	:OPP:PEND	44
17.3	:OPP:STEP	44
17.4	:OPP:DWELL	44
17.5	:OPP:VTRig	45
17.6	:OPP:RESult[:OPP]	45
17.7	:OPP:RESult:PMAX	45
18	Load Effect Subsystem	46
18.1	:LEFFect:IMIN	46
18.2	:LEFFect:IMAX	47
18.3	:LEFFect:INORMAL	47
18.4	:LEFFect:DELay	47
18.5	:LEFFect:RESult:VOLTage?	48
18.6	:LEFFect:RESult:RESistance?	48
18.7	:LEFFect:RESult:REGulation?	48
19	Sweep Subsystem	49
19.1	:SWEEP:MODE	49
19.2	:SWEEP:IMIN	50
19.3	:SWEEP:IMAX	50
19.4	:SWEEP:SLEW[:BOTH]	51

19.5	:SWEEP:SLEW:RISE	51
19.6	:SWEEP:SLEW:FALL	52
19.7	:SWEEP:FStart	52
19.8	:SWEEP:FEND	53
19.9	:SWEEP:STEP	53
19.10	:SWEEP:DWELL	53
19.11	:SWEEP:DUTY	54
20 Auto Subsystem		55
20.1	:AUTO:FILE	56
20.2	:AUTO:COUNT	56
20.3	:AUTO ADD	56
20.4	:AUTO CLEAR	57
20.5	:AUTO DONE	57
20.6	:AUTO:MODE	57
20.7	:AUTO:LEVel	58
20.8	:AUTO:SLEW[:BOTH]	58
20.9	:AUTO:SLEW:RISE	59
20.10	:AUTO:SLEW:FALL	59
20.11	:AUTO:IRANGE	60
20.12	:AUTO:VRANGE	60
20.13	:AUTO:LIMIT	60
20.14	:AUTO:UPPer	61
20.15	:AUTO:LOWer	61
20.16	:AUTO:FAIL	62
20.17	:AUTO:TYPe	62
20.18	:AUTO:TIMe	63
21 System Subsystem		64
21.1	:SYStem:LANGuage	64
21.2	:SYStem:VOICe	64
21.3	:SYStem:REMOte	65
21.4	:SYStem:SENSe	65
21.5	:SYStem:PMem	65
21.6	:SYStem:DISP	66
21.7	:SYStem:SOURce	66
21.8	:SYStem:EPRo	66

# About Commands & Queries

This section lists and describes the remote control commands and queries recognized by the instrument. All commands and queries can be executed in either local or remote state.

The description, command syntax, query syntax, example and respond can be found in a section. The commands are given in both long and short form. All examples are shown in short form. Queries perform actions such as obtaining information, and are recognized by the question mark (?) following the header.

---

## 1.1 How They are Listed

---

The commands are listed by subsystem and alphabetical order according to their short form.

---

## 1.2 How They are Described

---

In the descriptions themselves, a brief explanation of the function performed is given. This is followed by a presentation of the formal syntax, with the header given in Upper-and-Lower-Case characters and the short form derived from it in ALL UPPER-CASE characters. Where applicable, the syntax of the query is given with the format of its response.

---

## 1.3 When can they be used?

---

The commands and queries listed here can be used for the 855X DC Load Series.

---

## 1.4 Command Notation

---

The following notation is used in the commands:

< > Angular brackets enclose words that are used as placeholders, of which there are two types: the header path and the data parameter of a command.

:= A colon followed by an equals sign separates a placeholder from the description of the type and range of values that may be used in a command instead of the placeholder.

{ } Braces enclose a list of choices, one of which one must be made.

[ ] Square brackets enclose optional items

... An ellipsis indicates that the items both to its left and right may be repeated a number of times.

## **1.5 Data Types**

SCPI defines several different data types for use in program messages to the instrument and for use in response messages from the instrument.

The instrument uses the following subset of SCPI data types:

- Character
- <NR1>
- <NR2>
- <NRf>
- <Boolean>

### **1.5.1 Character Data Types**

If a command parameter takes a character data type, a specific number of settings are allowed for the parameter. For example, in the following command, you can specify one of the following character data types to select the operation mode: CURR | VOLT | RES | POW

:FUNCTION CURR | VOLT | RES | POW | DYN | LIST | LED | BAT | TIM | OCP |

Character data types have the following characteristics:

- Can have either the short or long form in program messages and are returned in short-form only in response messages
- Are case insensitive in program messages and are in uppercase only in response messages
- Must have a specific length

### **1.5.2 <NR1> Value Data Type**

The <NR1> value data type is used to specify zero, and positive and negative integer decimal values, including optional signs. If you need to indicate decimal points, use the <NR2> value data type, instead.

The following values are examples of the <NR1> data type:

0          255          -2

### **1.5.3 <NR2> Value Data Type**

The <NR2> value data type is used to specify zero, and positive and negative decimal values, including optional signs and decimal points.

The difference between <NR1> and <NR2> is the explicit decimal point. Note that 0 is a special case and redundant decimal points are ignored.

The following values are examples of the <NR2> data type:

-1.234      1.0      0.0

### **1.5.4 <NRf> Value Data Type**

The <NRf> data type is used to specify a floating-point value. These values include digits with an implied decimal point, an explicit decimal point, or an explicit decimal point and an exponent.

The following values are examples of the <NRf> data type:

6553      1.525e-4      0.100000

### **1.5.5 <Boolean> Value Data Type**

A Boolean data type for a parameter and response represents a single binary condition that is either True or False. Boolean values are defined as follows:

- 0 or OFF – indicates that the condition is False
- 1 or ON – indicates that the condition is True

Note that the characters OFF and ON are not case sensitive. The instrument accepts characters OFF and ON instead of 0 and 1, however if queried, the instrument returns Boolean responses as either 0 or 1.

# Common Command Introduction

IEEE standard defines the common commands used for querying the basic inSyntaxion of the instrument or executing basic operations. These commands usually start with "\*" and the length of the keywords of the command is usually 3 characters.

Short	Long Form	Subsystem	Description
*IDN	*IDN	SYSTEM	Returns a string that uniquely identifies the instrument.
*RST	*RST	SYSTEM	Initiates a device reset.
*TRG	*TRG	SYSTEM	Generates an immediate trigger.

**Table 2.1** Common Commands

---

## 2.1 \*IDN?

---

**Description** The \*IDN? query causes the instrument to identify itself. The response comprises manufacturer, model, serial number, software version and firmware version.

**Query** \*IDN?

**Response** \*IDN, <device id>, <model>, <serial number>, <software version>, <hardware version>.

<device id>:= "B&K" is used to identify instrument.

<model>:= A model identifier less than 14 characters will contain the model number.

<serial number>:= Number that uniquely identifies the instrument.

<firmware version>:= Firmware revision number.

<hardware version>:= Hardware revision number.

**Example** \*IDN?

Returns: <string> BK,BK8551,<serial number>,Ver 1.0.8,Hardware 2.006

---

## 2.2 \*RST

---

**Description** Reset the instrument to its factory default state. \*RST does not affect stored instrument states, or the I/O settings, which are stored in non-volatile memory.

**Syntax** \*RST

**Example** \*RST

---

## 2.3 \*TRG

---

**Description** The \*TRG command generates an immediate trigger when the trigger source is set to **BUS**.

**Syntax** \*TRG

**Example** \*TRG

**Related** TRIGger:SOURce

# Input Subsystem

The input subsystem configures the input state. There are 3 input states; **On**, **Off**, and **Short**.

3.1	:INPut[:STATe]	11
3.2	:INPut:SHORT	11

---

## 3.1 :INPut[:STATe]

**Description** Enable/Disable the input of the DC load.

**Syntax** :INPut[:STATe] <boolean>  
<boolean> := { On | Off or 1 | 0 }

**Query** :INPut[:STATe]?

**Example** INP ON

**Response** Returns: <boolean>

---

## 3.2 :INPut:SHORT

**Description** Sets the input short mode and enables/disables the input.

**Syntax** :INPut:SHORT <boolean>  
<boolean> := { On | Off or 1 | 0 }

**Query** :INPut:SHORT?

**Example** :INP:SHOR 1

**Response** Returns: <boolean>

# MEASure Subsystem

The MEASure subsystem contains the commands used to query the input's current, voltage, resistance, and power input.

4.1	MEASure:VOLTage	12
4.2	MEASure:CURRent	12
4.3	MEASure:RES	12
4.4	MEASure:POWer	13

---

## 4.1 MEASure:VOLTage

**Description** Reads the voltage amplitude measured at the input.

**Query** MEASure:VOLTage?

**Example** MEAS:VOLT?

**Query Respond** Returns: <NR2>

---

## 4.2 MEASure:CURRent

**Description** Reads the current amplitude measured at the input.

**Query** MEASure:CURRent?

**Example** MEAS:CURR?

**Query Respond** Returns: <NR2>

---

## 4.3 MEASure:RES

**Description** Reads the input's set resistance.

**Query** MEASure:RES?

**Example** MEAS:RES?

**Query Respond** Returns: <NR2>

---

## 4.4 MEASure:POWer

---

**Description** Reads the power measured at the input.

**Query** MEASure:POWer?

**Example** MEAS:POW?

**Query Respond** Returns: <NR2>

# Function Subsystem

The function subsystem switches the operation mode. Setting a mode will automatically change the menu in the instrument.

5.1 :FUNction

14

---

## 5.1 :FUNction

**Description** Sets the function mode of the instrument. The menu in the instrument will change to the corresponding function menu.

**Syntax** :FUNction <character>

<character> := {CURR | VOLT | RES | POW | DYN | LIST | LED | BAT | TIM | OCP | OVP | OPP | LEFF | SWEEP | AUTO}

**Query** :FUNction?

**Example** FUNC CURR

**Response** Returns: <character>

# Current Subsystem

The current subsystem contains all commands that configure the current parameters. These parameters include: Range, value, and slew rate.

6.1	:CURRent	15
6.2	:CURRent:RANGe	16
6.3	:CURRent:SLEW[:BOTH]	16
6.4	:CURRent:SLEW:RISE	17
6.5	:CURRent:SLEW:FALL	17

## 6.1 :CURRent

**Description** Sets the I-set value in constant current mode. The I-set value is the current value the load will sink when the input is enabled.

**Syntax** :CURRent <NR2>

8550 : <NR2> := {0.0000 to 30.000}

8551 : <NR2> := {0.0000 to 60.000}

### NOTICE

The value has a resolution of .1 mA when the current range is set to low, and a resolution of 1 mA when the current range is set to high.

**Query** :CURRent?

**Example** CURR 10.000

**Response** Returns: <NR2>

---

## 6.2 :CURRent:RANGe

---

**Description** Sets the current range of the selected operation mode. The command will not affect the current range of the modes that are not selected.

**Syntax** :CURRent:RANGe <NR1>

8550<NR1> := {3 | 30}

8551<NR1> := {6 | 60}

**Query** :CURRent:RANGe?

**Example** CURR:RANG 6

**Response** Returns: <NR1>

---

## 6.3 :CURRent:SLEW[:BOTH]

---

**Description** Sets the same slew rate for both the rise and fall slope in constant current mode (CC).

### NOTICE

The instrument must be in CC operation mode for the command to work. If the instrument is not in CC mode upon entering CC the slew values will be set to the default values (0.300 A/ $\mu$ s)

---

**Syntax** :CURRent:SLEW[:BOTH] <NR2>

<NR2> := {0.012 to 3.00 s}

**Query** :CURRent:SLEW[:BOTH]?

**Example** CURR:SLEW 0.200

**Response** Returns: <NR2>,<NR2>

---

## 6.4 :CURRent:SLEW:RISE

---

**Description** Sets the current rise time for constant current mode (CC).

**NOTICE**

The instrument must be in CC operation mode for the command to work. If the instrument is not in CC mode upon entering CC the rise time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :CURRent:SLEW:RISE <NR2>

<NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :CURRent:SLEW:RISE?

**Example** CURR:SLEW:RISE 0.200

**Response** Returns: <NR2>

---

## 6.5 :CURRent:SLEW:FALL

---

**Description** Sets the current fall time for constant current mode (CC).

**NOTICE**

The instrument must be in CC operation mode for the command to work. If the instrument is not in CC mode upon entering CC the fall time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :CURRent:SLEW:FALL <NR2>

<NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :CURRent:SLEW:FALL?

**Example** CURR:SLEW:FALL 0.200

**Response** Returns: <NR2>

# Voltage Subsystem

The VOLTage subsystem contains all commands that configure the voltage parameters. These parameters include: Range, value, slew rate, Von and Voff.

7.1	:VOLTage	18
7.2	:VOLTage:RANGe	19
7.3	:VOLTage:SLEW	19
7.4	:Voltage:ON	20
7.5	:Voltage:OFF	20

## 7.1 :VOLTage

**Description** Sets the V-set value in constant voltage mode. The V-set value is the voltage value the load will maintain when the input is enabled.

**Syntax** :VOLTage <NR2>  
<NR2> := {0.000 to 150.00}

### NOTICE

The value has a resolution of 1 mV when the voltage range is set to low, and a resolution of 10 mV when the voltage range is set to high.

**Query** :VOLTage?

**Example** VOLT 10.000

**Response** Returns: <NR2>

---

## 7.2 :VOLTage:RANGe

---

**Description** Sets the voltage range of the selected operation mode. The command will not affect the voltage range of the modes that are not selected.

**Syntax** :VOLTage:RANGe <NR1>  
<NR1> := {15 | 150}

**Query** :VOLTage:RANGe?

**Example** VOLT:RANG 15

**Response** Returns: <NR1>

---

## 7.3 :VOLTage:SLEW

---

**Description** Sets the voltage rise time for constant voltage mode (CV).

**NOTICE**

The instrument must be in CV operation mode for the command to work. If the instrument is not in CV mode upon entering CV the rise time will be set to the default value (0.300 V/ms)

---

**Syntax** :VOLTage:SLEW <NR2>  
<NR2> := {0.001 to 3.00 V/ms}

**Query** :VOLTage:SLEW?

**Example** VOLT:SLEW 0.200

**Response** Returns: <NR2>

---

## 7.4 :Voltage:ON

---

**Description** Sets the load voltage (Von) value.

Upon enabling the input if the input voltage is lower than this value, the ON/OFF button light flashes and no current is sunk until the input voltage exceeds this value. When the input voltage is greater than this value, the ON/OFF button light is always on and the load begins to sink current.

**Syntax** :VOLTage:ON <NR2>

<NR2> := {0.20 to 150.10 V}

**Query** :VOLTage:ON?

**Example** VOLT:ON 30.00

**Response** Returns: <NR2>

---

## 7.5 :Voltage:OFF

---

**Description** Sets the load unloading voltage (Voff) value.

When the load is officially loaded, if the input voltage value is lower than this value, the instrument is turned off and the load stops sinking current.

**Syntax** :VOLTage:OFF <NR2>

<NR2> := {0.00 to 150.09 V}

### NOTICE

The :VOLTage:OFF value cannot exceed the :VOLTage:ON value.

---

**Query** :VOLTage:OFF?

**Example** VOLT:OFF 20.00

**Response** Returns: <NR2>

# Resistance Subsystem

The resistance subsystem consists of a single command which sets the R-set value.

8.1 :RESistance

21

---

## 8.1 :RESistance

---

**Description** Sets the R-set value in constant resistance mode. The R-set value is the resistance value the load will maintain when the input is enabled.

**Syntax** :RESistance <NR2>

8551: <NR2> := {0.0500Ω to 50 kΩ}

**Query** :RESistance?

**Example** RES 50000

**Response** Returns: <NR2>

# Power Subsystem

The power subsystem consist of a single command which sets the P-set value.

9.1 :POWer

22

---

## 9.1 :POWer

---

**Description** Sets the P-set value in constant power mode. The P-set value is the power value the load will maintain when the input is enabled.

**Syntax** :POWer <NR2>

8550 : <NR2> := {0.00 to 350.00 W}

8551 : <NR2> := {0.00 to 175.00 W}

**Query** :POWer?

**Example** POW 350

**Response** Returns: <NR2>

# Dynamic Subsystem

The dynamic subsystem contains the commands used to configure the parameters of transient mode.

10.1	:DYNAmic:ALEVel	23
10.2	:DYNAmic:BLEVel	24
10.3	:DYNAmic:AWIDth	24
10.4	:DYNAmic:BWIDth	25
10.5	:DYNAmic:SLEW[:BOTH]	25
10.6	:DYNAmic:SLEW:RISE	26
10.7	:DYNAmic:SLEW:FALL	26
10.8	:DYNAmic:REPeat	27
10.9	:DYNAmic:MODE	27

---

## 10.1 :DYNAmic:ALEVel

---

**Description** Sets the A level of the transient mode.

**Syntax** :DYNAmic:ALEVel <NR2>

8550: <NR2> := {0.0000 to 30.000 A}

8550: <NR2> := {0.0000 to 60.000 A}

### NOTICE

The value has a resolution of .1 mA when the current range is set to low, and a resolution of 1 mA when the current range is set to high.

---

**Query** :DYNAmic:ALEVel?

**Example** DYN:ALEV 10.000

**Response** Returns: <NR2>

---

## 10.2 :DYNamic:BLEVel

---

**Description** Sets the B level of the transient mode.

**Syntax** :DYNamic:BLEVel <NR2>

8550: <NR2> := {0.0000 to 30.000 A}

8550: <NR2> := {0.0000 to 60.000 A}

### NOTICE

The value has a resolution of .1 mA when the current range is set to low, and a resolution of 1 mA when the current range is set to high.

---

**Query** :DYNamic:BLEVel?

**Example** DYN:BLEV 10.000

**Response** Returns: <NR2>

---

## 10.3 :DYNamic:AWIDth

---

**Description** Sets the duration of the A level in transient mode.

**Syntax** :DYNamic:AWIDth <NR2>

<NR2> := {20  $\mu$ s to 60.00s}

**Query** :DYNamic:AWIDth?

**Example** DYN:AWIDT 0.00002

**Response** Returns: <NR2>

### NOTICE

When the units are in ms the instrument will respond with a resolution of 10 ms. For example, a response of 000.02 indicates A width is set to 20  $\mu$ s. When the units are in seconds the instrument will respond with a resolution of 1ms. For example, a response of 00.020 indicates A width is set to 20 ms.

---

---

## 10.4 :DYNamic:BWIDth

---

**Description** Sets the duration of the B level in transient mode.

**Syntax** :DYNamic:BWIDth <NR2>  
<NR2> := {20  $\mu$ s to 60.00s}

**Query** :DYNamic:BWIDth?

**Example** DYN:BWIDT 0.00002

**Response** Returns: <NR2>

### NOTICE

When the units are in ms the instrument will respond with a resolution of 10 ms. For example, a response of 000.02 indicates B width is set to 20  $\mu$ s. When the units are in seconds the instrument will respond with a resolution of 1ms. For example, a response of 00.020 indicates B width is set to 20 ms.

---

---

## 10.5 :DYNamic:SLEW[:BOTH]

---

**Description** Sets the same slew rate for both the rise and fall slope in transient mode.

### NOTICE

The instrument must be in transient operation mode for the command to work. If the instrument is not in transient mode upon entering transient mode the slew values will be set to the default values (0.300 A/ $\mu$ s)

---

**Syntax** :DYNamic:SLEW[:BOTH] <NR2>  
<NR2> := {0.012 to 3.00 s}

**Query** :DYNamic:SLEW[:BOTH]?

**Example** DYN:SLEW 0.200

**Response** Returns: <NR2>

---

## 10.6 :DYNamic:SLEW:RISE

---

**Description** Sets the current rise time for transient mode.

### NOTICE

The instrument must be in transient operation mode for the command to work. If the instrument is not in transient mode upon entering transient mode the rise time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :DYNamic:SLEW:RISE <NR2>

<NR2> := {0.012 to 0.300 A/ $\mu$ s}

**Query** :DYNamic:SLEW:RISE?

**Example** DYN:SLEW:RISE 0.200

**Response** Returns: <NR2>

---

## 10.7 :DYNamic:SLEW:FALL

---

**Description** Sets the current fall time for transient mode.

### NOTICE

The instrument must be in transient mode for the command to work. If the instrument is not in transient mode upon entering transient mode the fall time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :DYNamic:SLEW:FALL <NR2>

<NR2> := {0.012 to 0.300 A/ $\mu$ s}

**Query** :DYNamic:SLEW:FALL?

**Example** DYN:SLEW:FALL 0.200

**Response** Returns: <NR2>

---

## 10.8 :DYNamic:REPeat

---

**Description** Sets the number of repetitions in transient continuous mode. This value indicates the number of times the transient operation will run.

**Syntax** :DYNamic:REPeat <NR1>  
<NR1> := {0 to 65535}

**Query** :DYNamic:REPeat?

**Example** DYN:REP 10

**Response** Returns: <NR1>

---

## 10.9 :DYNamic:MODE

---

**Description** Sets the dynamic operation mode.

**Syntax** :DYNamic:MODE <character>  
<character> := {CONTInuous | PULSe | TOGGle}

**Query** :DYNamic:MODE?

**Example** DYN:MODE PULS

**Response** Returns: <character>

# List Subsystem

The LIST subsystem contains all the commands that configure the list mode parameters. These parameters include file: number, mode, count. The commands to edit a list are also included in this subsystem. The commands to edit a list include: add, clear, done and level.

11.1	:LIST:FILE	28
11.2	:LIST:MODE	28
11.3	:LIST:COUNT	29
11.4	:LIST ADD	29
11.5	:LIST CLEAR	29
11.6	:LIST DONE	29
11.7	:LIST:LEVel:	30

---

## 11.1 :LIST:FILE

---

**Description** Selects the list file to be executed or edited.

**Syntax** :LIST:FILE <NR1>  
<NR1> := {1 to 10}

**Query** :LIST:FILE?

**Example** LIST:FILE 1

**Response** Returns: <NR1>

---

## 11.2 :LIST:MODE

---

**Description** Sets the operation mode of the list function. List has three operation modes: countinuous, count, and step. The modes determine how the list will be executed.

**Syntax** :LIST:MODE <character>  
<character> := {CONT | COUNT | STEP}

**Query** :LIST:MODE?

**Example** LIST:MODE CONT

**Response** Returns: <character>

---

## 11.3 :LIST:COUNT

---

**Description** Sets the number of times a list will be executed when list mode is set to count.

**Syntax** :LIST:COUNT <NR1>  
<NR1> := {1 to 100}

**Query** :LIST:COUNT?

**Example** LIST:COUNT 2

**Response** Returns: <NR1>

---

## 11.4 :LIST ADD

---

**Description** Insert a new step into the selected list.

**Syntax** :LIST ADD

**Example** LIST ADD

---

## 11.5 :LIST CLEAR

---

**Description** Clears all steps of the selected list

**Syntax** :LIST CLEAR

**Example** LIST CLEAR

---

## 11.6 :LIST DONE

---

**Description** Completes edits to the selected file.

**Syntax** :LIST DONE

**Example** LIST DONE

---

## 11.7 :LIST:LEVel:

---

**Description** Configures the parameters of the selected step. Only the step of the selected file will be affected.

**Syntax** :LIST:LEVel:<NR1> <NR2>,<NR2>,<NR2>

Step : <NR1> := {1 to 100}

Current Level : <NR2> := {0.000 to 60.00}

Step duration : <NR2> := {0.00001 to 50 s}

Slope : <NR2> := {0.0012 to 0.300 A/ $\mu$ s}

**Query** :LIST:LEVel:<NR1>?

**Example** LIST:LEV:1 2.000,5.00,0.300

**Response** Returns: <NR2>,<NR2>,<NR2>

# LED Subsystem

The LED subsystem contains all the commands used to configure the parameters of LED mode. These parameters include: Vo, Io, and Rd coeff.

12.1	:LED:VOLTage	31
12.2	:LED:CURREnt	31
12.3	:LED:RCOeff	32

---

## 12.1 :LED:VOLTage

---

**Description** Sets the LED turn-on voltage.

**Syntax** :LED:VOLTage <NR2>  
<NR2> := {0 to 150.1 V}

**Query** :LED:VOLTage?

**Example** LED:VOLT 4.00

**Response** Returns: <NR2>

---

## 12.2 :LED:CURREnt

---

**Description** Sets the LED conduction current.

**Syntax** :LED:CURREnt <NR2>  
8550 : <NR2> := {0.000 to 60.0 V} 8551 : <NR2> := {0.000 to 30.0 V}

**Query** :LED:CURREnt?

**Example** LED:CURREnt 0.100

**Response** Returns: <NR2>

---

## 12.3 :LED:RCOeff

---

**Description** Sets the LED condutction coefficient.

**Syntax** :LED:RCOeff <NR2>

<NR2> := {0.01 to 1.00}

**Query** :LED:RCOeff?

**Example** LED:RCOeff 0.80

**Response** Returns: <NR2>

# Battery Subsystem

The BATtery subsystem contains all the commands used to configure battery mode.

13.1	:BATtery:MODE	33
13.2	:BATtery:VALue	33
13.3	:BATtery:CONDition	34
13.4	:BATtery:LEVel	34

---

## 13.1 :BATtery:MODE

---

**Description** Sets the discharge mode of the battery test.

**Syntax** :BATtery:MODE <character>  
<character> := {CURR | RES | POW}

**Query** :BATtery:MODE?

**Example** BAT:MODE CURR

**Response** Returns: <character>

---

## 13.2 :BATtery:VALue

---

**Description** Sets the operation value of the battery test. The range of the value will vary depending on the mode selected.

**Syntax** :BATtery:VALue <NR2>  
CC Mode: 8550 : <NR2> := {0.000 to 60.100}  
8551 : <NR2> := {0.000 to 30.000}  
CR Mode: <NR2> := {0.050 to 50000  $\Omega$ }  
CW Mode: 8550 : <NR2> := {0.000 to 350.00}  
8551 : <NR2> := {0.000 to 175.000}

**Query** :BATtery:VALue?

**Example** BAT:VAL 3.000

**Response** Returns: <NR2>

---

### 13.3 :BATtery:CONDition

---

**Description** Sets the stop condition type for the battery test.

**Syntax** :BATtery:CONDition <character>  
<character> := {VOLT | TIM | AH | WH}

**Query** :BATtery:CONDition?

**Example** BAT:COND VOLT

**Response** Returns: <character>

---

### 13.4 :BATtery:LEVel

---

**Description** Sets the threshold level for the battery test stop condition.

**Syntax** :BATtery:LEVel <NR2>  
Voltage Condition: 8550 : <NR2> := {0.000 to 175.100 V}  
8551 : <NR2> := {0.000 to 350.000 V}

Time Condition: <NR2> := {1 to 360000 s}

Ah Condition: <NR2> := {0.01 to 999999 Ah}

Wh Condition: <NR2> := {0.01 to 999999 Wh}

**Query** :BATtery:LEVel?

**Example** BAT:LEV 2.00

**Response** Returns: <NR2>

# Time Subsystem

The TIME subsystem contains the commands used to configure the time mode parameters. These parameters include: load mode, mode value, trigger source, starting edge, starting level, ending edge, and ending edge level. The results of the test can also be queried.

14.1	:TIMing:LOAD:MODE	35
14.2	:TIMing:LOAD:VALue	36
14.3	:TIMing:TStart:SOURce	36
14.4	:TIMing:TStart:LEVel	37
14.5	:TIMing:TStart:EDGE	37
14.6	:TIMing:TEND:SOURce	37
14.7	:TIMing:TEND:LEVel	38
14.8	:TIMing:TEND:EDGE	38
14.9	:TIMing:RESult	38

---

## 14.1 :TIMing:LOAD:MODE

---

**Description** Sets the load to be used for the time test.

**Syntax** :TIMing:LOAD:MODE <character>  
<character> := {CURR | VOLT | POW | RES | OFF}

**Query** :TIMing:LOAD:MODE?

**Example** TIM:LOAD:MODE CURR

**Response** Returns: <character>

---

## 14.2 :TIMing:LOAD:VALue

---

**Description** Sets the load value to be used for the time test.

**Syntax** :TIMing:LOAD:VALue <NR2>

CC Mode: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

CV Mode: <NR2> := {0.000 to 150.00}

CR Mode: <NR2> := {0.050 to 50000  $\Omega$ }

CW Mode: 8550 : <NR2> := {0.000 to 350.00}

8551 : <NR2> := {0.000 to 175.000}

**Query** :TIMing:LOAD:VALue?

**Example** TIM:LOAD:VAL 6.000

**Response** Returns: <character>

---

## 14.3 :TIMing:TStart:SOURce

---

**Description** Sets the source that will trigger the start of the counter.

**Syntax** :TIMing:TStart:SOURce <character>

<character> := {VOLT | CURR | TRIG}

**Query** :TIMing:TStart:SOURce?

**Example** TIM:TST:SOUR CURR

**Response** Returns: <character>

---

## 14.4 :TIMing:TSTart:LEVel

---

**Description** Set the level that triggers the start of the counter.

**Syntax** :TIMing:TSTart:LEVel <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

Volt range: <NR2> := {0.000 to 150.00}

**Query** :TIMing:TSTart:LEVel?

**Example** TIM:TST:LEV 10.000

**Response** Returns: <NR2>

---

## 14.5 :TIMing:TSTart:EDGE

---

**Description** Sets the trigger edge that starts the time test.

**Syntax** :TIMing:TSTart:EDGE <character>

<character> := {RISE | FALL}

**Query** :TIMing:TSTart:EDGE?

**Example** TIM:TST:EDG FALL

**Response** Returns: <character>

---

## 14.6 :TIMing:TEND:SOURce

---

**Description** Sets the source that will trigger the end of the time test.

**Syntax** :TIMing:TEND:SOURce <character>

<character> := {VOLT | CURR | TRIG}

**Query** :TIMing:TEND:SOURce?

**Example** TIM:TEND:SOUR CURR

**Response** Returns: <character>

---

## 14.7 :TIMing:TEND:LEVel

---

**Description** Set the level that triggers the end of the time test.

**Syntax** :TIMing:TEND:LEVel <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

Volt range: <NR2> := {0.000 to 150.00}

**Query** :TIMing:TEND:LEVel?

**Example** TIM:TEND:LEV 10.000

**Response** Returns: <NR2>

---

## 14.8 :TIMing:TEND:EDGE

---

**Description** Sets the trigger edge that ends the time test.

**Syntax** :TIMing:TEND:EDGE <character>

<character> := {RISE | FALL}

**Query** :TIMing:TEND:EDGE?

**Example** TIM:TEND:EDG FALL

**Response** Returns: <character>

---

## 14.9 :TIMing:RESult

---

**Description** Query the results of the time test.

**Query** :TIMing:RESult?

**Example** TIM:RES?

**Response** Returns: <NR2>

# OCP Subsystem

The OCP subsystem contains the commands used to configure the OCP Test mode parameters. These parameters include the: start current, end current, step increment, step dwell time, and the end voltage trigger. The commands also provide a query to read the results of the test as well as the maximum power point.

15.1	:OCP:ISart	39
15.2	:OCP:IEND	40
15.3	:OCP:STEP	40
15.4	:OCP:DWELL	40
15.5	:OCP:VTRig	41
15.6	:OCP:RESult[:OCP]	41
15.7	:OCP:RESult:PMAX	41

---

## 15.1 :OCP:ISart

---

**Description** Sets the starting load current of the OCP test.

**Syntax** :OCP:ISart <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :OCP:ISart?

**Example** OCP:IST 2.000

**Response** Returns: <NR2>

---

## 15.2 :OCP:IEND

---

**Description** Sets the value of the last load current step for the OCP test.

**Syntax** :OCP:IEND <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :OCP:IEND?

**Example** OCP:IEND 2.000

**Response** Returns: <NR2>

---

## 15.3 :OCP:STEP

---

**Description** Sets the incremental steps of the OCP test.

**Syntax** :OCP:STEP <NR1>

<NR1> := {1 to 100}

**Query** :OCP:STEP?

**Example** :OCP:STEP 5

**Response** Returns: <NR1>

---

## 15.4 :OCP:DWELL

---

**Description** Sets the time width for each step in the OCP test.

**Syntax** :OCP:DWELL <NR2>

<NR2> := {0.00001 to 0.99999}

**Query** :OCP:DWELL?

**Example** OCP:DWELL 0.200

**Response** Returns: <NR2>

---

## 15.5 :OCP:VTRig

---

**Description** Sets the voltage level that triggers over-current protection. The test will end once the input signal meets the voltage value.

**Syntax** :OCP:VTRig <NR2>  
<NR2> := {0.000 to 150.00}

**Query** :OCP:VTRig?

**Example** OCP:VTR 12.000

**Response** Returns: <NR2>

---

## 15.6 :OCP:RESult[:OCP]

---

**Description** Query the value of the overcurrent protection point.

**Query** :OCP:RESult[:OCP]?

**Example** OCP:RES?

**Response** Returns: <NR2>

---

## 15.7 :OCP:RESult:PMAX

---

**Description** Query the maximum power point recorded in the OCP test.

**Query** :OCP:RESult:PMAX?

**Example** OCP:RES:PMAX?

**Response** Returns: <NR2>

# OVP Subsystem

The OVP subsystem contains the commands used to configure the OVP Test mode as well as query the test results.

16.1	:OVP:VTRig	42
16.2	:OVP:RESult[:OVP]	42
16.3	:OVP:RESult:TIME	42

---

## 16.1 :OVP:VTRig

**Description** Sets the voltage level that triggers over-voltage protection. The test will end once the input signal meets the voltage value.

**Syntax** :OVP:VTRig <NR2>  
<NR2> := {0.000 to 150.00}

**Query** :OVP:VTRig?

**Example** OVP:VTR 12.000

**Response** Returns: <NR2>

---

## 16.2 :OVP:RESult[:OVP]

**Description** Query the value of the overcurrent protection point.

**Query** :OVP:RESult[:OVP]?

**Example** OVP:RES?

**Response** Returns: <NR2>

---

## 16.3 :OVP:RESult:TIME

**Description** Query the calculated time for the output to settle from the peak voltage to desired voltage value.

**Query** :OVP:RESult:TIME?

**Example** OVP:RES:TIME?

**Response** Returns: <NR2>

# OPP Subsystem

The OPP subsystem contains the commands used to configure the OPP Test mode parameters. These parameters include the: start power, end power, step increment, step dwell time, and the end voltage trigger. The commands also provide a query to read the results of the test as well as the maximum recorded power point.

17.1	:OPP:PStart	43
17.2	:OPP:PEND	44
17.3	:OPP:STEP	44
17.4	:OPP:DWELL	44
17.5	:OPP:VTRig	45
17.6	:OPP:RESult[:OPP]	45
17.7	:OPP:RESult:PMAX	45

---

## 17.1 :OPP:PStart

**Description** Sets the starting load power of the OPP test.

**Syntax** :OPP:PStart <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :OPP:PStart?

**Example** OPP:PST 2.000

**Response** Returns: <NR2>

---

## 17.2 :OPP:PEND

---

**Description** Sets the value of the last load power step for the OPP test.

**Syntax** :OPP:PEND <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :OPP:PEND?

**Example** OPP:PEND 2.000

**Response** Returns: <NR2>

---

## 17.3 :OPP:STEP

---

**Description** Sets the incremental steps of the OPP test.

**Syntax** :OPP:STEP <NR1>

<NR1> := {1 to 100}

**Query** :OPP:STEP?

**Example** :OPP:STEP 5

**Response** Returns: <NR1>

---

## 17.4 :OPP:DWELL

---

**Description** Sets the time width for each step in the OPP test.

**Syntax** :OPP:DWELL <NR2>

<NR2> := {.00001 to 0.99999}

**Query** :OPP:DWELL?

**Example** OPP:DWELL 0.200

**Response** Returns: <NR2>

---

## 17.5 :OPP:VTRig

---

**Description** Sets the voltage level that triggers over-power protection. The test will end once the input signal meets the voltage value.

**Syntax** :OPP:VTRig <NR2>  
<NR2> := {0.000 to 150.00}

**Query** :OPP:VTRig?

**Example** OPP:VTR 12.000

**Response** Returns: <NR2>

---

## 17.6 :OPP:RESult[:OPP]

---

**Description** Query the value of the over-power protection point.

**Query** :OPP:RESult[:OPP]?

**Example** OPP:RES?

**Response** Returns: <NR2>

---

## 17.7 :OPP:RESult:PMAX

---

**Description** Query the maximum power point recorded in the OPP test.

**Query** :OPP:RESult:PMAX?

**Example** OPP:RES:PMAX?

**Response** Returns: <NR2>

# Load Effect Subsystem

The LEFF subsystem contains the commands used to configure the parameters of the load effect test. These parameters include: minimum current, maximum current, normal load operation, and step delay. The subsystem also includes query commands to read the results of the test.

18.1	:LEFFect:IMIN	46
18.2	:LEFFect:IMAX	47
18.3	:LEFFect:INORMAL	47
18.4	:LEFFect:DElay	47
18.5	:LEFFect:RESult:VOLTage?	48
18.6	:LEFFect:RESult:RESistance?	48
18.7	:LEFFect:RESult:REGulation?	48

---

## 18.1 :LEFFect:IMIN

---

**Description** Sets the low level load current of the load regulation test.

**Syntax** :LEFFect:IMIN <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :LEFFect:IMIN?

**Example** LEFF:IMIN 1.000

**Response** Returns: <NR2>

---

## 18.2 :LEFFect:IMAX

---

**Description** Sets the high level load current of the load regulation test.

**Syntax** :LEFFect:IMAX <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :LEFFect:IMAX?

**Example** LEFF:IMAX 60.000

**Response** Returns: <NR2>

---

## 18.3 :LEFFect:INORMal

---

**Description** Sets the normal load current level of the load regulation test.

**Syntax** :LEFFect:INORMal <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :LEFFect:INORMal?

**Example** LEFF:INORM 30.000

**Response** Returns: <NR2>

---

## 18.4 :LEFFect:DELAy

---

**Description** Sets the load current time for each step in the load regulation test.

**Syntax** :LEFFect:DELAy <NR2>

<NR2> := {0.1 to 60 s}

**Query** :LEFFect:DELAy?

**Example** LEFF:DEL 5.00

**Response** Returns: <NR2>

---

## 18.5 :LEFFect:RESult:VOLTage?

---

**Description** Query the difference between the maximum voltage and the minimum voltage.

**Query** :LEFFect:RESult:VOLTage?

**Example** LEFF:RES:VOLT?

**Response** Returns: <NR2>

---

## 18.6 :LEFFect:RESult:RESistance?

---

**Description** Query the calculated internal resistance of the DUT.

**Query** :LEFFect:RESult:RESistance?

**Example** LEFF:RES:RES?

**Response** Returns: <NR2>

---

## 18.7 :LEFFect:RESult:REGulation?

---

**Description** Query the calculated load adjustment rate.

**Query** :LEFFect:RESult:REGulation?

**Example** :LEFF:RES:REG?

**Response** Returns: <NR2>

# Sweep Subsystem

The SWEEP subsystem contains the commands used to configure the parameters of the sweep test. The commands supported are:

19.1	:SWEEP:MODE	49
19.2	:SWEEP:IMIN	50
19.3	:SWEEP:IMAX	50
19.4	:SWEEP:SLEW[:BOTH]	51
19.5	:SWEEP:SLEW:RISE	51
19.6	:SWEEP:SLEW:FALL	52
19.7	:SWEEP:FStart	52
19.8	:SWEEP:FEND	53
19.9	:SWEEP:STEP	53
19.10	:SWEEP:DWELL	53
19.11	:SWEEP:DUTY	54

---

## 19.1 :SWEEP:MODE

---

**Description** Sets the sweep working mode.

**Syntax** :SWEEP:MODE <character>  
<character> := {AUTO | MANuI}

**Query** :SWEEP:MODE?

**Example** SWEEP:MODE AUTO

**Response** Returns: <character>

---

## 19.2 :SWEEP:IMIN

---

**Description** The sets minimum load current level of the sweep test.

**Syntax** :SWEEP:IMIN <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :SWEEP:IMIN?

**Example** SWEEP:IMIN 1.000

**Response** Returns: <NR2>

---

## 19.3 :SWEEP:IMAX

---

**Description** The sets maximum load current level of the sweep test.

**Syntax** :SWEEP:IMAX <NR2>

Current range: 8550 : <NR2> := {0.000 to 60.000}

8551 : <NR2> := {0.000 to 30.000}

**Query** :SWEEP:IMAX?

**Example** SWEEP:IMAX 5.000

**Response** Returns: <NR2>

---

## 19.4 :SWEEP:SLEW[:BOTH]

---

**Description** Sets the same slew rate for both the rise and fall slope in sweep mode.

**NOTICE**

The instrument must be in sweep operation mode for the command to work. If the instrument is not in sweep mode upon entering the sweep menu the slew values will be set to the default values (0.300 A/ $\mu$ s)

---

**Syntax** :SWEEP:SLEW[:BOTH] <NR2>

<NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :SWEEP:SLEW[:BOTH]?

**Example** SWEEP:SLEW 0.200

**Response** Returns: <NR2>,<NR2>

---

## 19.5 :SWEEP:SLEW:RISE

---

**Description** Sets the current rise time for sweep mode.

**NOTICE**

The instrument must be in sweep operation mode for the command to work. If the instrument is not in sweep mode upon entering the sweep menu the rise time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :SWEEP:SLEW:RISE <NR2>

<NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :SWEEP:SLEW:RISE?

**Example** SWEEP:SLEW:RISE 0.200

**Response** Returns: <NR2>

---

## 19.6 :SWEEP:SLEW:FALL

---

**Description** Sets the current fall time for sweep mode.

**NOTICE**

The instrument must be in sweep operation mode for the command to work. If the instrument is not in sweep mode upon entering the sweep menu the fall time will be set to the default value (0.300 A/ $\mu$ s)

---

**Syntax** :SWEEP:SLEW:FALL <NR2>

<NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :SWEEP:SLEW:FALL?

**Example** SWEEP:SLEW:FALL 0.200

**Response** Returns: <NR2>

---

## 19.7 :SWEEP:FStart

---

**Description** Sets the starting frequency of the SWEEP test.

**Syntax** :SWEEP:FStart <NR2>

<NR2> := {0.01 to 25000.00 Hz}

**Query** :SWEEP:FStart?

**Example** SWEEP:FST 50.000

**Response** Returns: <NR2>

---

## 19.8 :SWEEP:FEND

---

**Description** Sets the value of the last frequency step for the SWEEP test.

**Syntax** :SWEEP:FEND <NR2>  
<NR2> := {0.01 to 25000.00 Hz}

**Query** :SWEEP:FEND?

**Example** SWEEP:FEND 60.000

**Response** Returns: <NR2>

---

## 19.9 :SWEEP:STEP

---

**Description** Sets the incremental steps of the SWEEP test.

**Syntax** :SWEEP:STEP <NR1>  
<NR2> := {0.01 to 25000.00 Hz}

**Query** :SWEEP:STEP?

**Example** :SWEEP:STEP 5

**Response** Returns: <NR1>

---

## 19.10 :SWEEP:DWELL

---

**Description** Sets the time width for each step in the SWEEP test.

**Syntax** :SWEEP:DWELL <NR2>  
<NR2> := {0.0001 to 99.999 s}

**Query** :SWEEP:DWELL?

**Example** SWEEP:DWELL 10.000

**Response** Returns: <NR2>

---

## 19.11 :SWEEP:DUTY

---

**Description** Sets the sweep duty cycle.

**Syntax** :SWEEP:DUTY <NR1>

<NR1> := {1 to 99 %}

**Query** :SWEEP:DUTY?

**Example** SWEEP:DUTY 50

**Response** Returns: <NR1>

# Auto Subsystem

The AUTO subsystem contains the commands used to configure the parameters of the auto test. The commands supported are:

20.1	:AUTO:FILE	56
20.2	:AUTO:COUNT	56
20.3	:AUTO ADD	56
20.4	:AUTO CLEAR	57
20.5	:AUTO DONE	57
20.6	:AUTO:MODE	57
20.7	:AUTO:LEVel	58
20.8	:AUTO:SLEW[:BOTH]	58
20.9	:AUTO:SLEW:RISE	59
20.10	:AUTO:SLEW:FALL	59
20.11	:AUTO:IRANGE	60
20.12	:AUTO:VRANGE	60
20.13	:AUTO:LIMIT	60
20.14	:AUTO:UPPer	61
20.15	:AUTO:LOWer	61
20.16	:AUTO:FAIL	62
20.17	:AUTO:TYPe	62
20.18	:AUTO:TIMe	63

---

## 20.1 :AUTO:FILE

---

**Description** Selects the file to be executed or edited aswell as the step to be edited.

**Syntax** :AUTO:FILE <NR1>,<NR1>

File Number: <NR1> := {1 to 10}

Step Number: <NR1> := {1 to 50}

### NOTICE

The first <NR1> value specifies the file number while the second <NR1> value specifies the step number.

---

**Query** :AUTO:FILE?

**Example** AUTO:FILE 1,2

**Response** Returns: <NR1>

---

## 20.2 :AUTO:COUNT

---

**Description** Sets the number of loop counts the selected file will run.

**Syntax** :AUTO:COUNT <NR1>

<NR1> := {1 to 100}

**Query** :AUTO:COUNT?

**Example** AUTO:COUNT 2

**Response** Returns: <NR1>

---

## 20.3 :AUTO ADD

---

**Description** Insert a new step into the selected file.

**Syntax** :AUTO ADD

**Example** AUTO ADD

---

## 20.4 :AUTO CLEAR

---

**Description** Clears all steps of the selected file

**Syntax** :AUTO CLEAR

**Example** AUTO CLEAR

---

## 20.5 :AUTO DONE

---

**Description** Completes edits to the selected file.

**Syntax** :AUTO DONE

**Example** AUTO DONE

---

## 20.6 :AUTO:MODE

---

**Description** Sets the operation mode of the selected step in the selected file.

**Syntax** :AUTO:MODE <character>  
<character> := {CURR | VOLT | RES | POW}

**Query** :AUTO:MODE?

**Example** AUTO:MODE CURR

**Response** Returns: <character>

---

## 20.7 :AUTO:LEVel

---

**Description** Sets the load value of the selected step in the selected file.

**Syntax** :AUTO:LEVel <NR2>

CC Mode: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

CV Mode: <NR2> := {0.000 to 150.00}

CR Mode: <NR2> := {0.050 to 50000  $\Omega$ }

CW Mode: 8550 : <NR2> := {0.000 to 350.00}

8551 : <NR2> := {0.000 to 175.000}

**Query** :AUTO:LEVel?

**Example** AUTO:LEV 10.000

**Response** Returns: <NR2>

---

## 20.8 :AUTO:SLEW[:BOTH]

---

**Description** Sets the same slew rate for both the rise and fall slope in auto mode.

### NOTICE

The instrument must be in auto operation mode for the command to work. If the instrument is not in auto mode upon entering the auto menu the slew values will be set to the default values (0.300 A/ $\mu$ s for CC and 3.00 V/ms for CV)

---

**Syntax** :AUTO:SLEW[:BOTH] <NR2>

CV Mode : <NR2> := {0.00 to 3.00 V/ms}

CC Mode : <NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :AUTO:SLEW[:BOTH]?

**Example** AUTO:SLEW 0.200

**Response** Returns: <NR2>,<NR2>

---

## 20.9 :AUTO:SLEW:RISE

---

**Description** Sets the current rise time for auto mode.

### NOTICE

The instrument must be in auto operation mode for the command to work. If the instrument is not in auto mode upon entering the auto menu the slew values will be set to the default values (0.300 A/ $\mu$ s for CC and 3.00 V/ms for CV)

---

**Syntax** :AUTO:SLEW:RISE <NR2>

CV Mode : <NR2> := {0.00 to 3.00 V/ms}

CC Mode : <NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :AUTO:SLEW:RISE?

**Example** AUTO:SLEW:RISE 0.200

**Response** Returns: <NR2>

---

## 20.10 :AUTO:SLEW:FALL

---

**Description** Sets the current fall time for auto mode.

### NOTICE

The instrument must be in auto operation mode for the command to work. If the instrument is not in auto mode upon entering the auto menu the slew values will be set to the default values (0.300 A/ $\mu$ s for CC and 3.00 V/ms for CV)

---

**Syntax** :AUTO:SLEW:FALL <NR2>

CV Mode : <NR2> := {0.00 to 3.00 V/ms}

CC Mode : <NR2> := {0.012 to 3.00 A/ $\mu$ s}

**Query** :AUTO:SLEW:FALL?

**Example** AUTO:SLEW:FALL 0.200

**Response** Returns: <NR2>

---

## 20.11 :AUTO:IRANGE

---

**Description** Sets the current range of the selected step in the selected file.

**Syntax** :AUTO:IRANGE <NR1>

8550 : <NR1> := {6 A | 60 A} 8551 : <NR2> := {3 A | 30 A}

**Query** :AUTO:IRANGE?

**Example** :AUTO:IRANGE 6

**Response** Returns: <NR1>

---

## 20.12 :AUTO:VRANGE

---

**Description** Sets the voltage range of the selected step in the selected file.

**Syntax** :AUTO:VRANGE <NR1>

<NR1> := {15 V | 150 V}

**Query** :AUTO:VRANGE?

**Example** AUTO:VRANGE 6

**Response** Returns: <NR1>

---

## 20.13 :AUTO:LIMIT

---

**Description** Sets the limit type of the selected step in the selected file.

**Syntax** :AUTO:LIMIT <character>

<character> := {CURR | VOLT | POW | OFF}

**Query** :AUTO:LIMIT?

**Example** AUTO:LIMIT CURR

**Response** Returns: <character>

---

## 20.14 :AUTO:UPPer

---

**Description** Sets the upper limit of the selected step in the selected file.

**Syntax** :AUTO:UPPer <NR2>

CC Mode: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

CV Mode: <NR2> := {0.000 to 150.00}

CW Mode: 8550 : <NR2> := {0.000 to 350.00}

**Query** :AUTO:UPPer?

**Example** AUTO:UPP 10.000

**Response** Returns: <NR2>

---

## 20.15 :AUTO:LOWer

---

**Description** Sets the lower limit of the selected step in the selected file.

**Syntax** :AUTO:LOWer <NR2>

CC Mode: 8550 : <NR2> := {0.000 to 60.100}

8551 : <NR2> := {0.000 to 30.000}

CV Mode: <NR2> := {0.000 to 150.00}

CW Mode: 8550 : <NR2> := {0.000 to 350.00}

**Query** :AUTO:LOWer?

**Example** AUTO:LOW 10.000

**Response** Returns: <NR2>

---

## 20.16 :AUTO:FAIL

---

**Description** Sets the fail operation of the selected step in the selected file. The fail operation will be determined if the test is aborted when the input fails to meet the limits or if the test continues regardless of the failure.

**Syntax** :AUTO:FAIL <character>  
<character> := {CONTIN | ABORT}

**Query** :AUTO:FAIL?

**Example** AUTO:FAIL ABORT

**Response** Returns: <character>

---

## 20.17 :AUTO:TYPE

---

**Description** Sets the delay type of the selected step in the selected file. The type determines if the test continuously transitions from one step to the next once the delay time elapses, or if a trigger is required to proceed from one step to the next after the delay time elapses.

**Syntax** :AUTO:TYPE <character>  
<character> := {TIM | TRIG}

**Query** :AUTO:TYPE?

**Example** AUTO:TYP TIM

**Response** Returns: <character>

---

## 20.18 :AUTO:TIME

---

**Description** Sets the delay time of the selected step in the selected file. The delay time set the run duration of the corresponding step.

**Syntax** :AUTO:TIME <NR2>  
<NR2> := {0.1 to 99.0 s}

**Query** :AUTO:TIME?

**Example** AUTO:TIM 10.0

**Response** Returns: <NR2>

# System Subsystem

The SYStem subsystem contains the commands used to configure the instruments settings. The commands supported are:

21.1	:SYStem:LANGuage	64
21.2	:SYStem:VOICe	64
21.3	:SYStem:REMOte	65
21.4	:SYStem:SENSe	65
21.5	:SYStem:PMem	65
21.6	:SYStem:DISP	66
21.7	:SYStem:SOURce	66
21.8	:SYStem:EPRO	66

---

## 21.1 :SYStem:LANGuage

---

**Description** Sets the interface language of the instrument. The language can be set to chinese (CN) or english (EN)

**Syntax** :SYStem:LANGuage <character>  
<character> := {CN | EN}

**Query** :SYStem:LANGuage?

**Example** SYS:LANG EN

**Response** Returns: <character>

---

## 21.2 :SYStem:VOICe

---

**Description** Enable/Disable the buzzer.

**Syntax** :SYStem:VOICe <boolean>  
<boolean> := {1 | 0 or ON | OFF}

**Query** :SYStem:VOICe?

**Example** SYS:VOIC 0

**Response** Returns: <boolean>

---

### 21.3 :SYSTem:REMOte

---

**Description** Places the instrument in remote mode. The front panel will be lock disabling all front panel buttons except for Lock/Local.

**Syntax** :SYSTem:REMOte

**Example** SYST:REM

---

### 21.4 :SYSTem:SENSe

---

**Description** Enable/Disable the remote sense compensation.

**Syntax** :SYSTem:SENSe <boolean>  
<boolean> := {1 | 0 or ON | OFF}

**Query** :SYSTem:SENSe?

**Example** SYST:SENS 1

**Response** Returns: <boolean>

---

### 21.5 :SYSTem:PMem

---

**Description** Sets the location of the file to be loaded on boot up.

**Syntax** :SYSTem:PMem <character>  
<character> := {DEFAULT | FILER}

**Query** :SYSTem:PMem?

**Example** SYST:PM FILER

**Response** Returns: <character>

---

## 21.6 :SYStem:DISP

---

**Description** Sets the instrument UI display.

**Syntax** :SYStem:DISP <NR1>

<NR1> := {0 | 1 | 2 | 3}

**Query** :SYStem:DISP?

**Example** SYS:DISP 0

**Response** Returns: <NR1>

---

## 21.7 :SYStem:SOURce

---

**Description** Specifies what the source of the instrument under test is.

**Syntax** :SYStem:SOURce <character>

<character> := {CURR | VOLT}

**Query** :SYStem:SOURce?

**Example** SYS:SOUR VOLT

**Response** Returns: <character>

---

## 21.8 :SYStem:EPRo

---

**Description** Enable/Disable the external analog programming. Port 5 in the Handler interface on the rear panel of the instrument is the EXT-PROG port, which is used for external analog input. Connect this port to 0-10V voltage to simulate the input from 0 to full scale, thus adjust the input voltage and current value of the load.

**Syntax** :SYStem:EPRo <boolean>

<boolean> := {1 | 0 or ON | OFF}

**Query** :SYStem:EPRo?

**Example** SYS:EPR

**Response** Returns: <boolean>

Version: March 20, 2024