

HOW TO DOWNLOAD A DAS50 RECORD VIA FTP

We are going to see how to download a record, which is in the intern memory of the device, with the Sefram Pilot software. We use two examples: one where we will use the Sefram Pilot software and the second where we will use the Windows explorer.

I: Requisites


Must have set a record on a channel.

To set a record, refer to note NA_ENR_PARAM_ENR_SIMP.




Must be connected to the device via Sefram Pilot software.

II: Transfer a record with Sefram Pilot




1- Access to the intern memory of the device by pressing button “Explorer FTP”:

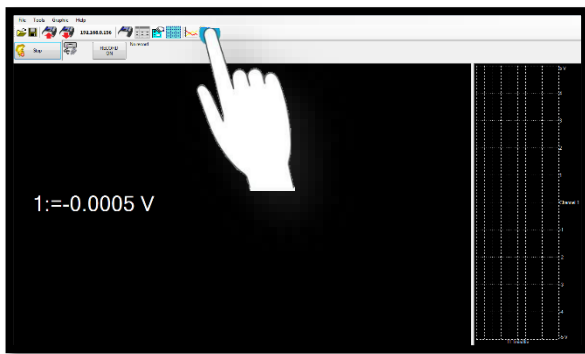

2- Make sure you are on the good folder. In this case, we want to transfer record which is in the folder “FolderREC”:

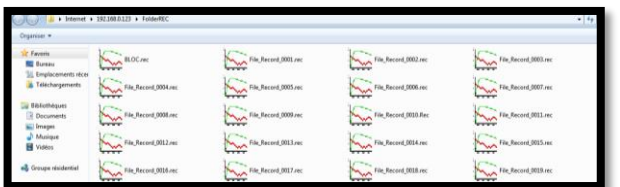



3- Choose the selected record and save it :

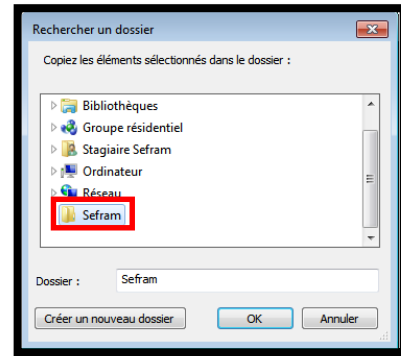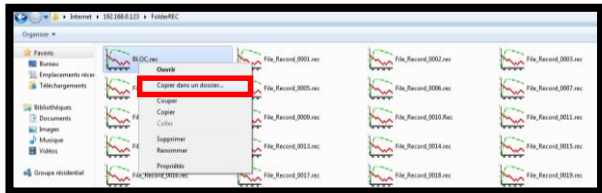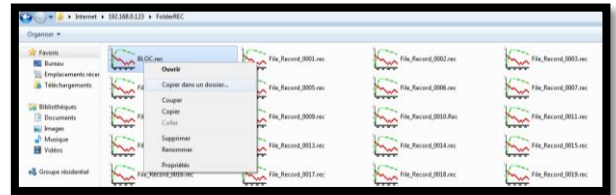


III: Transfer a record with Windows explorer

1- Access from the Window explorer to the intern memory of the device by writing "ftp:///" with the device IP address:

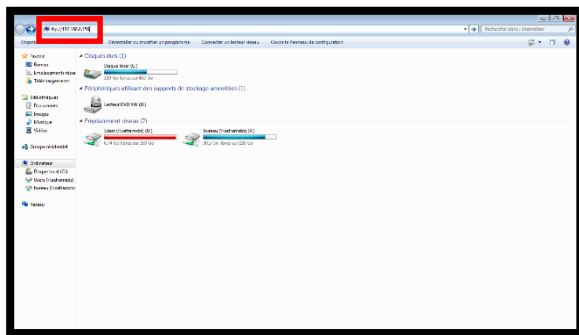

2- Make sure on the right folder. In this case, we want to display a curve which is in the folder "FolderREC":



3- Choose the selected record and save it :

